 


Greaseable Sway Bar Bushing Instructions

 
ENERGY SUSPENSION
1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

1. Remove old sway bar bushings and end links.
2. Clean and remove any rust or scale from the sway bar.
3. Grease the I.D. of the bushings and the contact area of the sway bar prior to installation.
4. Install bushings and brackets.
5. Rotate the stabilizer bar back and forth to disperse the grease throughout the bushing.
6. Install end links.

Note: For periodic maintenance, each bushing requires three full pumps of the grease gun to insure proper lubrication.

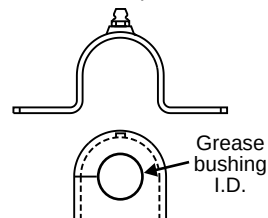

Install and maintain with your favorite grease.

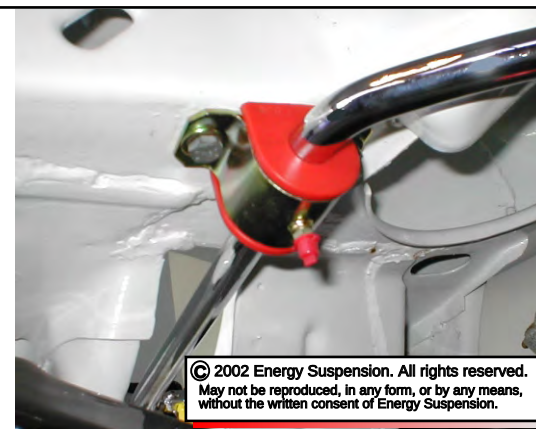


© 2002 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

Greaseable Sway Bar Bushing Instructions


ENERGY SUSPENSION
1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

1. Remove old sway bar bushings and end links.
2. Clean and remove any rust or scale from the sway bar.
3. Grease the I.D. of the bushings and the contact area of the sway bar prior to installation.
4. Install bushings and brackets.
5. Rotate the stabilizer bar back and forth to disperse the grease throughout the bushing.
6. Install end links.

 Note: For periodic maintenance, each bushing requires three full pumps of the grease gun to insure proper lubrication.

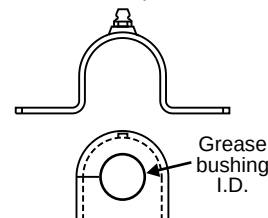

 Install and maintain with your favorite grease.

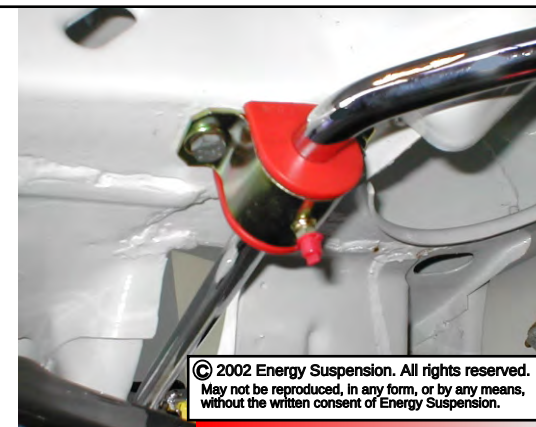


© 2002 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

Greaseable Sway Bar Bushing Instructions


ENERGY SUSPENSION
1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

1. Remove old sway bar bushings and end links.
2. Clean and remove any rust or scale from the sway bar.
3. Grease the I.D. of the bushings and the contact area of the sway bar prior to installation.
4. Install bushings and brackets.
5. Rotate the stabilizer bar back and forth to disperse the grease throughout the bushing.
6. Install end links.

 Note: For periodic maintenance, each bushing requires three full pumps of the grease gun to insure proper lubrication.

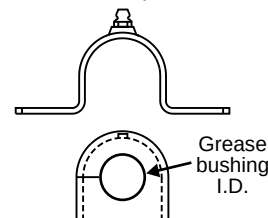

 Install and maintain with your favorite grease.

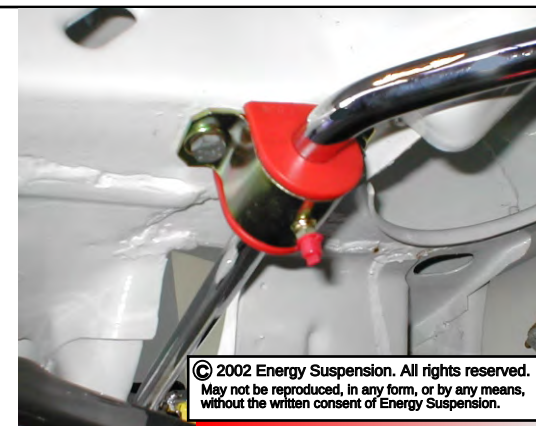

© 2002 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.