




Part no. 66488

Chrysler Bushing Installer &
Reamer Tool

The PROFORM® Chrysler bushing installer and reamer tool is designed to easily and precisely install and ream a distributor bushing during the installation process.

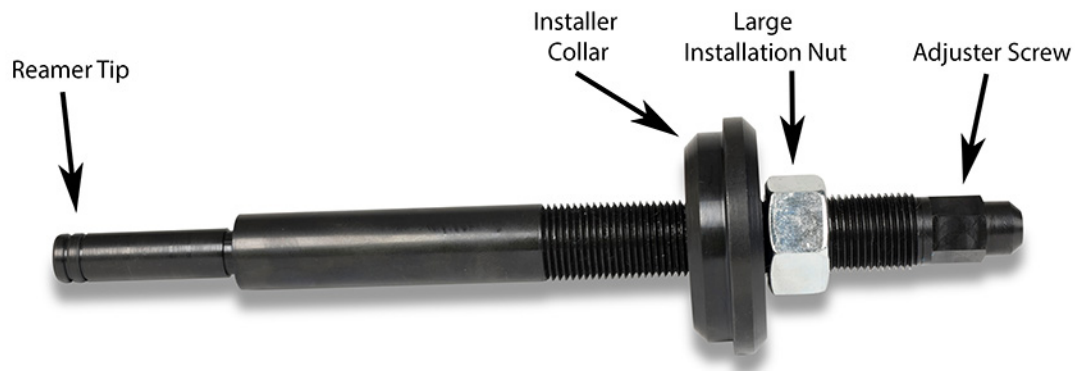

Instructions:

1. Completely disassemble the tool before use.
2. Slide a new bushing, flange first, over the reamer tip end of the tool. The bushing should fit tightly on the end of the tool.
3. Insert the installer tool, bushing end first, into the distributor hole of on the engine block, and guide the bushing into the distributor drive hole.
4. Place the installer collar over the threaded shaft portion of the tool, and place it securely in the distributor hole.
5. Tap the end of the tool with a hammer to drive the bushing into the distributor drive hole until the flange is flush with the engine block.
6. Hand thread the large installation nut onto the threaded shaft until it is snug against the installer collar.
7. With a 3/8" wrench, hold the adjuster screw at the end of the tool. Simultaneously, with a 7/8" wrench tighten the large installation nut. This will pull the reamer tip through the newly installed bushing giving it a smooth line bore like finish.
8. Remove the tool from the engine.
9. The bushing is ready to accept a distributor shaft.

For addition tech support related to this genuine PROFORM product, please call (586)774-2500,

Monday-Friday, 9 a.m.-5 p.m. EST, or send an email to tech@ProformParts.com

© 2017 Specialty Auto Parts U.S.A., Inc. All Rights Reserved.